


How To Correctly Display Thermal Imaging Temperature Measurement Information On PC

Download the latest PC version "TOPOTEK V41" from the official website. After connecting the gimbal camera via the network, you will find that the thermal imaging temperature measurement information cannot be read correctly. At this time, you need to turn off the computer's firewall and computer protection. The specific operations are as follows.

1: Enter the Windows Security Center

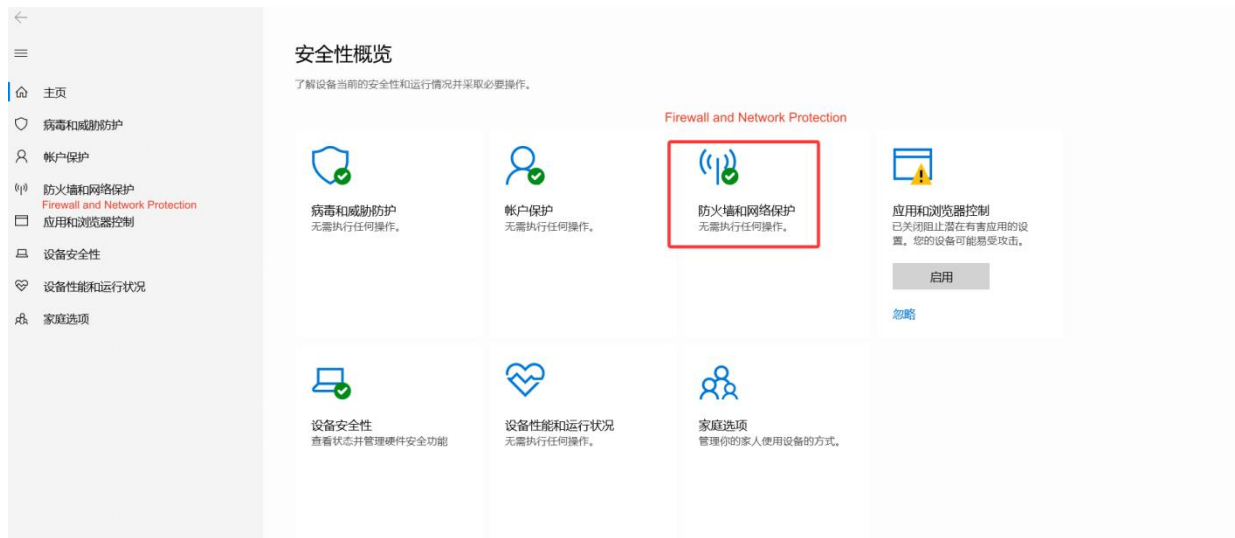

2: Click on Firewall and Network Protection to see Domain Network, Private Network and Public Network.

(🔒) Firewall and Network Protection

🏠 Domain Network
Opened

🏠 Private Network
Opened

🏠 Public Network
Opened

3: Click on the domain network, private network and public network respectively and turn off the switches. The effect is shown in the figure on the right.

