

# ARX-482R User Manual

## 1. Introduction

### 1.1 Compatibility

Compatible with SANWA FH3/FH4T remote control system.

Suitable for remote control M12, M11X, EXZES X, MT-4, GEMINI X, MT-S, MT-4S, M12S, M17.

### 1.2 Specification


Operating Voltage: 3.5V~8.4V

Dimension: 23.6×18.4×28.4mm

Weight: 7.3g

No. Of Channels: 4CH

PWM Mode: Normal/ SHR/ SSR

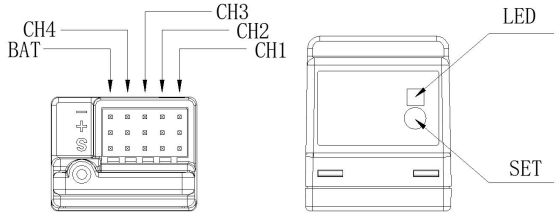

## 2. Feature

- 1) Bidirectional communication system, monitor the receiver voltage by transmitter in real time;
- 2) Compatible stabilizing voltage, operating voltage can up to 1-2s lipo, sudden low voltage won't be out of control;
- 3) High sensitivity built-in antenna, full 4CH output + BAT port suitable for all kinds of remote control cars, simulation rock crawlers.
- 4) T-shape design, small size to save more space for rc car.

## 3. Instruction

### 3.1 Bind Procedure

- 1) Turn on the transmitter, get to the SYSTEM menu and select BIND;
- 2) Pressing the “SET” button of receiver and power on, the LED on the receiver will flash slowly. Press and hold the “SET” button for 2 seconds then release, the LED on the receiver will keep flashing slowly;
- 3) Select BIND menu in the transmitter and press ENTER while the LED on the receiver is flashing slowly. The LED will be off immediately.
- 4) Press ENTER again on the transmitter, the LED will be solid, indicating binding process is successful;
- 5) Please repeat the above procedure if binding is failed.

### 3.2 LED Status

| Blue LED | Status              |
|----------|---------------------|
| Solid    | Receiving Signals   |
| Blink    | Binding Mode        |
| OFF      | No Signal Reception |